


INSTALLATION OF "PEEL & STICK"

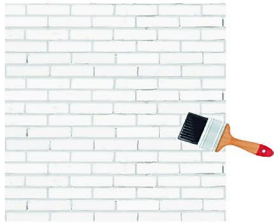


① Make sure the underlaying wall keep clean and smooth



② Cutting the sheet along with the mosaic chip joint, Just cut the backside adhesive film by utility knife.

③ In case to cut the mosaic chips, Measure and mark on mosaic chips for cutting. To score the tile surface along with the line by diamond blade, then split. And cut the backside adhesive film by utility knife.

**Check remark 1) & 2)

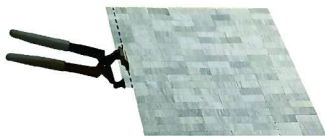


③ when crossing electrical outlets or other irregularities during installation, use a nipper pliers for shape



④ Fill a spray bottle with water and a little suds or dish detergent together



⑤ Peel away the release paper at the back of tile before installation, then spray some liquid and even spread mildly

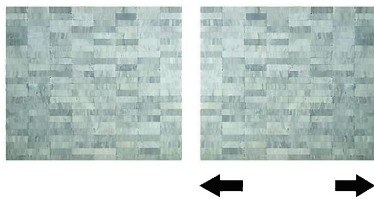

⑥ The liquid enable your tile move easily till satisfied position. Once your confirm with its placement, apply light pressure accross entire surface



⑦ Finally, seal edges with silicone

REMARKS

- 1) Please do not cut by the by diamond blade through with adhesive film on backside. It makes some damage for cutting blade and grider due to stick the adhesive film.
- 2) In case to scoring by diamond Blade, please wear the mask & eye protection goggles to protect.
- 3) In case to use for kitchens, Bathrooms, for wet area, please design to do not get wet the open frame edge, tile gaps, directly.